

6-3. Initialization

Items to initialize

After reconnecting or performing maintenance on the 12 volt battery, the hybrid system may not start. (→P. 431) Also, the following items must be initialized for normal system operation.

Item	When to initialize	Reference
Intuitive parking assist	<ul style="list-style-type: none"> • After reconnecting or changing the battery • After changing a fuse 	P. 512
Engine oil maintenance data	<ul style="list-style-type: none"> • After changing engine oil 	P. 425
Tire pressure warning system	<ul style="list-style-type: none"> • When rotating the tires on vehicles differing with front and rear tire inflation pressures. • When changing the tire inflation pressure by changing traveling speed or load weight, etc. • When changing the tire size. 	P. 437

6-3. Initialization

576

GS_HV_U

March 29, 2010 3:31 pm